

Please note: This procedure is different on our Stainless Steel towel rails.



1 Remove cover cap from top of air vent



2 There is a small indentation in the air bleed screw



3 Use a flat head screwdriver or similar tool to turn the screw anti clockwise (about 1/4 turn)

When fluid begins to seep slightly from the vent, turn it clockwise to close it again. Replace air vent cover cap.

4

N.B: There may be hot water in the towel rail, so please be careful not to open the air vent too quickly and ensure you have a towel or cloth to hand, so as not to get water on yourself or your surroundings.