


- All the dimensions are shown in millimetres
- Horizontal tube dia 35mm
- Vertical tube dia 35mm
- 1/2 inch BSP underside tappings
- Test pressure: 10 Bar
- Max working temperature: 8 Bar
- Heat output in accordance with EN 442

Please Note:

- Please allow minimum of 100mm for valves
- Summer element use will affect pipe centres.
- The flow and return can be reversed

Ondo	Water Content (L)	Weight (KG)	Pipe Centres +/- 2mm	Fixing Centres (H) +/- 2mm	Fixing Centres (W) +/- 2mm	Height (mm)	Width (mm)
RXON-0850600	4	6	795	675	518	850	600
RXON-1380600	6	9	1325	1125	518	1380	600

Installation:

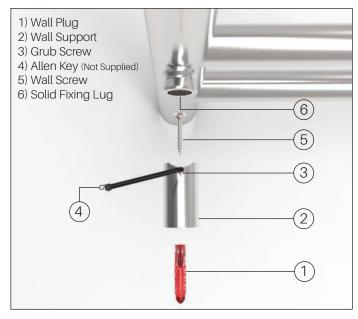

Step 1: Select the desired mounting position, make sure the wall is adequate to take the fixing points of the rail i.e anchor points must be securely attached to a stud or masonry.

Step 2: Loosely screw the wall support (Part 2) into the wall using the wall screw (5) and washer. Use wall plug (1) if you are fixing into masonry. Do no tighten fully.

Step 3: Manoeuvre the rail back onto the bracket and tighten with the grub screw (3).

Cleaning:

Do not use any abrasive or chemical cleaners to clean the radiators as this will cause damage to the surface finish. Please use warm water and a damp cloth.
Do not clean when hot.