


- All the dimensions are shown in millimetres
- Tube dia 20mm x 30mm
- Header tube dia 30mm x 30mm
- ½ inch BSP bottom opposite end connections
- Test pressure: 10 Bar
- Max working temperature: 8 Bar
- Heat output – in accordance with EN 442

**Please Note:**

- Please allow minimum of 100mm for valves
- Summer Element use will affect pipe centres
- The flow and return can be reversed

Quebis	Water Content (L)	Weight (KG)	Pipe Centres +/- 2mm	Fixing Centres (H) +/- 2mm	Fixing Centres (W) +/- 2mm	Height (mm)	Width (mm)
RXQU-0610300	2.3	6.1	270	450	270	610	600
RXQU-0700500	2.4	6.3	470	540	470	700	500
RXQU-0700600	3.9	10.8	570	540	570	700	600
RXQU-1100300	3	7.5	270	940	270	1100	300
RXQU-1100400	3.5	8.9	370	940	370	1100	400
RXQU-1100500	3.9	10.1	470	940	470	1100	500
RXQU-1100600	4.5	11.9	570	940	570	1100	600
RXQU-1550500	5.6	14.4	470	1390	470	1550	500
RXQU-1550600	6.46	16.97	570	1390	570	1550	600
RXQU-06100800	4.8	13.5	770	450	770	610	800
RXQU-06101000	5.8	16.5	970	450	970	610	1000

## Installation:

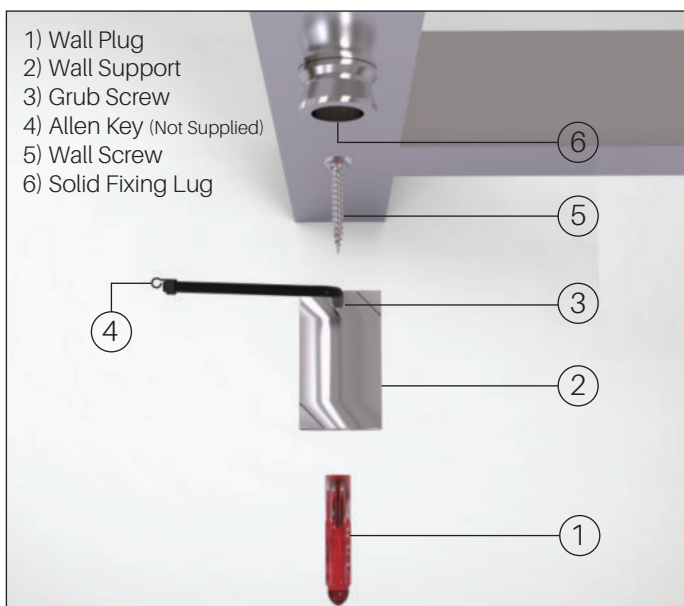

**Step 1:** Select the desired mounting position, make sure the wall is adequate to take the fixing points of the rail i.e anchor points must be securely attached to a stud or masonry.

**Step 2:** Loosely screw the wall support (Part 2) into the wall using the wall screw (5) and washer. Use wall plug (1) if you are fixing into masonry. Do not tighten fully.

**Step 3:** Manoeuvre the rail back onto the bracket and tighten with the grub screw (3).

**Cleaning:**

- Do not use any abrasive or chemical cleaners to clean the radiators as this will cause damage to the surface finish. Please use warm water and a damp cloth.
- Do not clean when hot.